

HOW-TO DATALOGGING

SAVE DATALOG

- 1 FINISH HEATING CYCLE AND PRESS GRAPH BUTTON



- 2 INSERT USB DRIVE IN HEATER



- 3 PRESS SAVE BUTTON AND CONFIRM BUTTON



CONVERT TO CHART

- 1 INSERT USB DRIVE IN PC



- 2 OPEN USB FOLDER

- 3 OPEN "CHART GENERATOR - SURETHERM"

To open and convert charts you will need Microsoft Excel installed

- 4 SELECT DATALOG FILE (DOUBLE-CLICK ON MOUSE)




SAVE CHART TO PDF

- 1 PRESS **CTRL** + **P** ON KEYBOARD

- 2 SELECT DOCUMENT PRINTER

For best results - Microsoft Print to PDF or Microsoft XPS Document Writer

- 3 PRESS PRINT BUTTON - FOLLOW ON-SCREEN INSTRUCTIONS

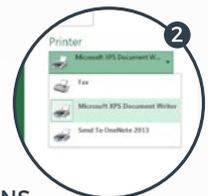

HOW-TO UPDATING FIRMWARE

M&R
EQUIPMENT

TM
INDUCTION HEATING

TIP If you want to receive news on future SURETHERM updates, make sure to register your induction heater online.

PREPARE USB DRIVE

- 1 EXTRACT ZIP FILE
- 2 INSERT USB DRIVE IN PC
- 3 MOVE UPDATE FILES TO USB DRIVE ROOT
- 4 EJECT USB DRIVE FROM PC



UPDATE HEATER

- 1 TURN HEATER ON AND INSERT THE USB DRIVE
- 2 HOLD THE START/STOP BUTTON FOR 8 SECONDS
- 3 SCROLL DOWN TO THE BOTTOM OF THE LIST
- 4 SELECT "UPDATE FIRMWARE GUI"
- 5 CHECK VERSION AND PRESS CONFIRM BUTTON
- 6 WAIT FOR HEATER TO COMPLETE UPDATING
- 7 FOLLOW ON-SCREEN INSTRUCTIONS



M&R
EQUIPMENT

Maintenance & Reliability Equipment *maintenance made - easier + faster + safer*
e: mark@mrequip.com.au m: +61 417 954 430 w: mrequip.com.au