

# HOW-TO UPDATING FIRMWARE



**TIP** If you want to receive news on future SURETHERM updates, make sure to register your induction heater online.

## PREPARE USB DRIVE

- 1 EXTRACT ZIP FILE
- 2 INSERT USB DRIVE IN PC
- 3 MOVE UPDATE FILES TO USB DRIVE ROOT
- 4 EJECT USB DRIVE FROM PC



## UPDATE HEATER

- 1 TURN HEATER ON AND INSERT THE USB DRIVE
- 2 HOLD THE START/STOP BUTTON FOR 8 SECONDS
- 3 SCROLL DOWN TO THE BOTTOM OF THE LIST
- 4 SELECT "UPDATE FIRMWARE GUI"
- 5 CHECK VERSION AND PRESS CONFIRM BUTTON
- 6 WAIT FOR HEATER TO COMPLETE UPDATING
- 7 FOLLOW ON-SCREEN INSTRUCTIONS



Feel free to send us an email at [info@mrequip.com.au](mailto:info@mrequip.com.au) if there are any remaining questions and/or remarks. You can find more info on our other solutions on [www.mrequip.com.au](http://www.mrequip.com.au) or [www.tminductionheating.com](http://www.tminductionheating.com).



**Maintenance & Reliability Equipment** *maintenance made - easier + faster + safer*

e: [info@mrequip.com.au](mailto:info@mrequip.com.au) m: +61 417 954 430 w: [mrequip.com.au](http://mrequip.com.au)